

QK-G022P GSM Remote Controller Manual



Designed in UK



Features

- Remote monitoring and control by mobile phone GSM SMS message
- Connects to up to 2 alarm inputs and 3 Relay outputs
- Automatic alarm by SMS message when alarm input is triggered
- Status request and response by SMS
- Remote control of 3 Relay outputs by SMS message
- Automated control of 2 Relay outputs by SMS message (activated by alarm input)
- Scheduled control of 2 Relay outputs by SMS message
- Remote manual override
- Android and iOS APP interface
- Monitor and Control through text message input or phone APP
- Up to 4 mobile phones can monitor and control through each unit
- In-built clock for programming the switch state
- Easy to install and configure via SMS or APP (no PC required)
- Compatible with all major 2G SIM networks (Tri-band GSM for use in Europe & USA)
- includes wireless passive infrared (PIR) motion detector as an additional alarm input

Contents

1.	Set up overview.....	3
2.	Introduction.....	4
3.	Hardware.....	5
4.	Enclosure	6
5.	Preparing SIM card	7
5.1.	Insert SIM into the SIM card slot.....	7
6.	Configuration	7
7.	Status LED's.....	8
8.	Alarm function and digital connection	10
9.	Relay working modes	11
9.1.	Normal open/ normal closed wiring options	11
9.2.	Daily timer setting	11
9.3.	Self-lock vs. latching mode	12
9.4.	Delay time setting on latching mode	13
10.	APP	14
10.1.	Setup.....	15
10.2.	Set QK controller SIM number	16
10.3.	Register SIM cards	17
10.4.	Setting the clock on the QK controller	18
10.5.	Check relay working mode	19
10.6.	Rename control terminals	21
10.7.	Control panel.....	22
11.	Command and response SMS.....	23
12.	Specification.....	26
13.	Specialized units	27
13.1.	Wireless PIR detector (G022P variant).....	27
14.	Order options	29
15.	Limited warranty and notices	29

1. Set up overview

❖ You will need:

SIM card:

- **The SIM must operate on the GSM (2G) network.** Most network providers provide 2G cover, check with your supplier.
- **Credit on the SIM (we recommend automatic top-ups)**
- **The SIM is not PIN protected**
- **The SIM is set to disable voicemail**
- **Avoid SIM cards that deactivate automatically if the SIM is not used often** (If your SIM will do this and if your G022P is likely to be unused for long periods of time you will have to send the G022P an update request periodically to keep the SIM card active.)

Power supply cable: make sure it is long enough to reach your device in its final location.

Check there is mobile network reception for your SIM card in the location that your device will be installed (you can check by putting the SIM card in a mobile phone)

❖ Installation:

1. **Download and install the app** for mobile phones. <https://www.quark-elec.com/downloads/apps/>
2. **Select G022P location:** location must be indoors and not exposed to water or high humidity.
3. **Connect the relay output (if required):** check relay setup for whether you want relays in normal open (NR) or normal closed (NC) position. Think about length of wires needed to connect.
4. **Connect alarm inputs (if required):** alarm inputs must send signal as switches closing circuit to input 1/2 or by sending low voltage signal to input 1/2. Think about length of wires needed to connect.
5. **Insert your SIM into the G022P device (make a note of the SIM number first for reference)**
6. **Connect to power:** Check LEDs are working correctly.

Red LED: will flash at 1 second intervals once the system has finished initialization. It will then flash every time it is operating a command

Blue LED: LED will flash blue at start up as it looks for a network signal. Once a signal has been found the LED will flash much slower, every 3 seconds.

7. **Register the main phone number that will control the device within 10 minutes of powering up the G021/22.** Register the main mobile terminal with G022P module by texting '88888888' from your chosen phone to G022P SIM card. If registration is successful, the module will reply with "Your phone has been registered". If unsuccessful, the module will reply with 'registered disabled'. If registration is unsuccessful, restart the device and reattempt registration within 10 minutes of powering up the device.

The network LED will flash after registration is completed. You can add up to 3 secondary control mobile phones using text/APP codes (check the manual for full list of text codes).

8. **You can now send commands and receive messages either by text or through the text generating APP.** Remember; the device processes one command at a time. Each command will have a reply to confirm the command has been received and executed. You must wait for a reply message before sending another command.

If G022P (PIR version):

Batteries: the PIR device uses a 9.0 volt D-shape battery.

Location: Think about location of sensor and whether there is anything in between the PIR sensor and the G021/22. Some obstructions will make the signal weaker for example metal structures and concrete walls.

(This is an overview only. Familiarize yourself with the manual before installation.)

2. Introduction

The G022P series remote controller is a versatile device which can be connected to many electronic devices in homes, offices, factories or wherever required. The standard G022P includes two digital alarm inputs, three independent relay switches.

It allows operators to control and monitor remote equipment or machines using SMS (Short Message Service) via the GSM network. Up to 4 mobile phone numbers (SIM card numbers) can be linked to each G022P remote controller (1 main control terminal, and up to 3 additional control terminals). These mobile phones can belong to technicians, engineers or individuals who have a requirement to control and/or monitor corresponding devices. The G022P includes:

- **Two digital alarm inputs connections:** for connection to various inputs to be monitored (an alarm SMS can be received when either alarm input is triggered. The alarm input can also be set to trigger automated control of the machinery connected to the Relay outputs 1 and/or 2)
- **Three relays output connections:** for connection to the machinery to be controlled (two with daily timers and automated control options manual options and one with manual SMS function)
- **Android and iOS APP:** the device can be controlled by either SMS text message codes or an APP for Android and iOS (iPhone) phones. This is a touch sensitive, user friendly interface.

Four control mobile phones - one main control terminal and up to 3 additional control terminals can be registered with G021/22.



Figure 1: System diagram

Three specialized modules available:

- **G021/22** includes the main controller unit
- **G022G** includes G022 plus a GPS receiver allowing you to track the location of the unit
- **G022P** includes G022 plus a wireless passive infrared (PIR) motion detector as an additional alarm input
- **G033** is a 3G version of our G021/22 main controller unit.

3. Hardware

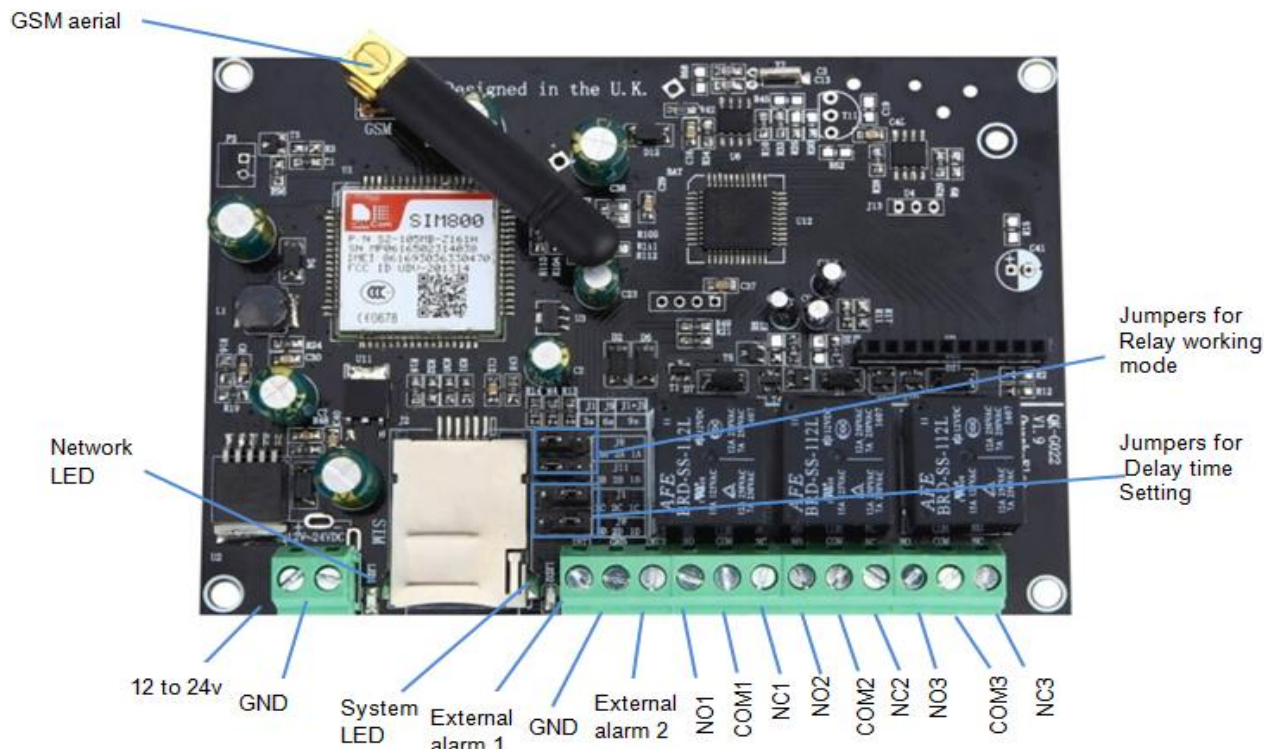


Figure 2: General view of the control module (V1.9)



Figure 3: G021 mechanical drawing (V1.5)

4. Enclosure

The enclosure is made of IP56 Insulation Class 2 plastic. External dimensions: 145 x 90 x 41 mm.



Figure 4: GK-G022 (with enclosure)

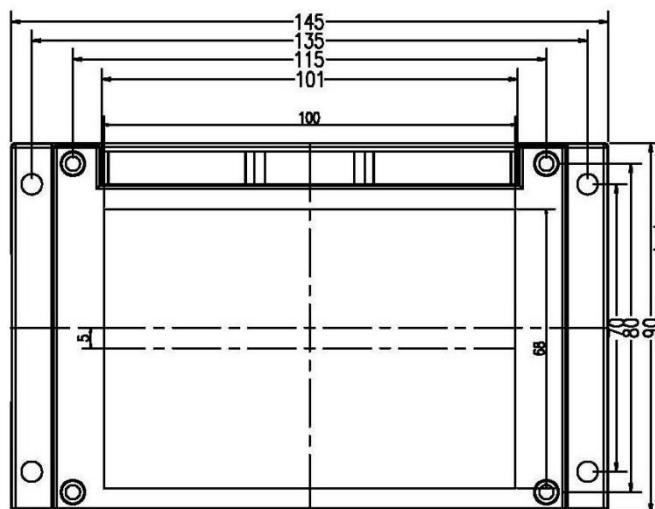


Figure 5: Enclosure drawing. Measurements in mm

5. Preparing SIM card

Please ensure:

- **The SIM must operate on the GSM (2G) network.** Most network providers provide 2G cover, check with your supplier.
- **There is credit on the SIM (we recommend automatic top-ups)**
- **The SIM is not PIN protected**
- **The SIM is set to disable voicemail**
- **Avoid SIM cards that deactivate automatically if the SIM is not used often** (usually after 3 months inactivity). If your SIM will do this and if you're G022P is likely to be unused for long periods of time; send the G022P an update request periodically to keep the SIM card active.

Register the SIM card; ensure there is sufficient credit on the card for programming confirmation texts to be sent from G022P module.

The PIN request option should be disabled from the SIM card before inserting it into the G022P module. To check the PIN request status of your SIM card, place the card in an unlocked mobile phone and switch the phone on. If normal calls can be made without entering a PIN number, then it is disabled. Please also make sure voicemail is disabled before inserting the SIM card into the module.

If a 'pay as you go' (PAYG) SIM card is used, it is recommended that users choose to automatically 'Top-Up' when the credit falls below a certain limit. Some PAYG SIM cards will be de-activated by the network if they are not used to make an outgoing voice call or send an SMS text message within a specific period. To prevent this, simply send the G022P a text 'DQSJ' (this can be done through the APP) and G022P will reply with the local time by text message. This should be done once a month to keep the SIM card active.

5.1. Insert SIM into the SIM card slot

- **Write down SIM number before inserting into G021/22**
- **The SIM card should be inserted into the SIM card slot before applying the power.**
- **Power Up**

The G022P module can be powered by 12V to 24V DC power supply).

Connect a 12V DC power supply to the power screw terminals 1 & 2, ensuring positive is connected to terminal 1 and switch on the power supply.

- **The red power LED** will flash at 1 second intervals once the system has finished initialization.
- **The blue network LED** indicator will initially flash quickly and, once logged onto the network, it will flash more slowly, approximately once every 3 to 4 seconds.

6. Configuration

The following steps are required to configure G022P for first time use:

- Insert the SIM card into controller box
- Power up
- Send '88888888' as SMS to the G022P controller. If successful, the user will receive the message '**Your phone has been registered**'. **This command should be received within the first 300 seconds after powering up G021/22. Otherwise "registered Disabled" message will be sent back to inform the failure of the main SIM registration.** If this happens, turn off the device and start again.

- If additional mobile terminals are required, the operator should send "BDn(mobile terminal number)F" to the G022P controller. The user will receive the message "**Your phone has been registered**". Up to 3 additional terminals can be configured (the main mobile number registered with the device won't show up when "**WHORED**" is sent). The operator is now ready to use G021/22. Details about the SMS command and response messages can be found in chapter 10

7. Resetting

The G022P has two types of reset. You can:

- Factory reset the module itself.
- Reset the main SIM controller SIM number (main mobile number in control of module), whilst keeping other settings.

7.1. Factory reset G022P memory

1. Hold the reset button for 10 seconds – the red LED should stay constantly on.
2. You now have 300 seconds to send the message **'88888888'** to the SIM card in the G021/22
3. This will register you as the main SIM controller.

You can also reset the Main controller SIM remotely, For example when the main SIM controller number has changed or you need to reset permissions for the main controller. This code allows you to remotely remove and reset all mobile phone numbers stored in the device.

7.2. Reset main controller SIM number

1. Send **'XGZHM'** command via text to the G022P SIM.
2. send **'88888888'** within 300 seconds to the G022P
3. The module will reply with **'Your phone has been registered'**.

If the G022P replies with the message **'registered disabled'** or **'Registered not allowed. Please Factory reset G022P module first'** then repeat factory reset steps.

8. Status LED's

The device has two working LED's to notify the user of its current operations. The network LED and the system LED. Both these LED's flash depending on their operating status.



- **Network LED** – LED will flash blue at start up as it looks for a network signal. Once a signal has been found the LED will flash much slower, every 3 seconds.

Quark-elec Manual

- **System LED** - will flash at 1 second intervals once the system has finished initialization. It will then flash every time it is operating a command

9. Alarm function and digital connection

G022P has two external alarm input connectors and various inputs can be connected to them. For example, door/windows sensors, smoke alarms, carbon dioxide detectors, motion sensors, thermostats, temperature/wind detectors, and moisture detectors.

Using these sensors/detectors, G022P can be set up as a protection/alarm and response system.

G022P external alarm inputs are active when a trigger pulse or a constant level of 0 V is applied.

If the sensor/detectors are triggered (they send the low level signal (0 V) to G021/22); G022P will send out an SMS to the registered mobile terminals. Meanwhile, the corresponding relays you set up will also be activated. (Alarm function can be disabled so as not to activate relay or timer; it will still send message to say alarm triggered)

Alarm input port	Corresponding relay number
External alarm 1 (INT1)	Relay 1
External alarm 2 (INT2)	Relay 2
* PIR detector	Relay 3
*Note: the Alarm input function is not supported on Relay 3 on the standard G021/22. However, the wireless PIR detector works with Relay 3 on the G022P variant. (More details can be found in the G022P section).	

There are two typical ways the external alarm inputs can communicate with G021/22. External alarm devices can be used as,

1. Switch
2. Alarm input source (low level voltage signal)

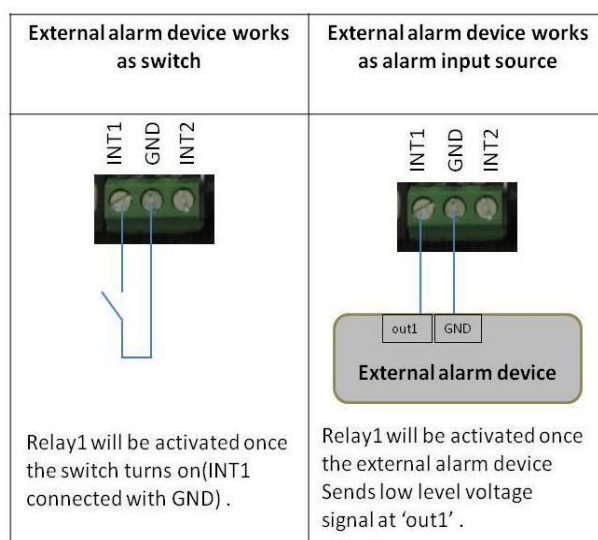


Figure 6: External alarm input device connection methods

10. Relay working modes

10.1. Normal open/ normal closed wiring options

The G022P is equipped with three digital output relays for connection to equipment to be controlled. The relays can be set up in normal open and normal closed positions. This gives the customer the advantage of having it set as a failsafe if there is a power loss or for timing the relay to open or close with delays.

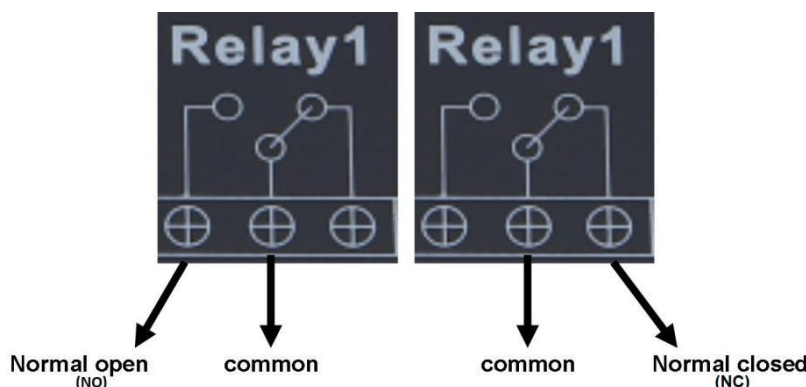


Figure 7: Relay positions

- **Normal open position** – if common and normal open are wired then relay 1 will be off when powered up. To activate relay 1 either a message or a command must be received from the user or from input 1. This activates the relay and closes the circuit turning on the output of relay1.
 - **Normal closed position** – if common and normal closed are wired then relay 1 will be active while the G022P is powered up. This is for fail safe systems where the power going off in the G022P will close relay 1 and activate the output of relay 1.
- Remember, the device processes one command at a time. Each command will have a reply to confirm the command has been received and executed. You must wait for a reply message before sending another command. **All SMS text commands must always be sent using CAPITAL letters. Do not add spaces or any other characters.**

10.2. Daily timer setting

Daily timer settings are for Relays 1 and 2. They support a daily timer function to control the actions of the output. This is useful for turning the relays on and off without having to message the device.

The relays will switch to ON/OFF states according to the timer settings. These two relays also support two working modes, self-lock and latching control.

10.3. Self-lock vs. latching mode

The G022P allows for two different working modes; self-lock control and latching control. Self-lock allows for the usual function of the relay where a command from the operator or the device to change is needed. If input from an alarm then the relay will stay locked on until the command “EXTRT” is sent to the device from the operator (this is also the same for latching mode).

With latching controls the device will return to its normal status after a period of seconds determined by the user. This is useful for output devices that don't need or want to be on for a long time after they have been turned on. For example alarm horns which might only need to be on for 12 seconds to alert the user.

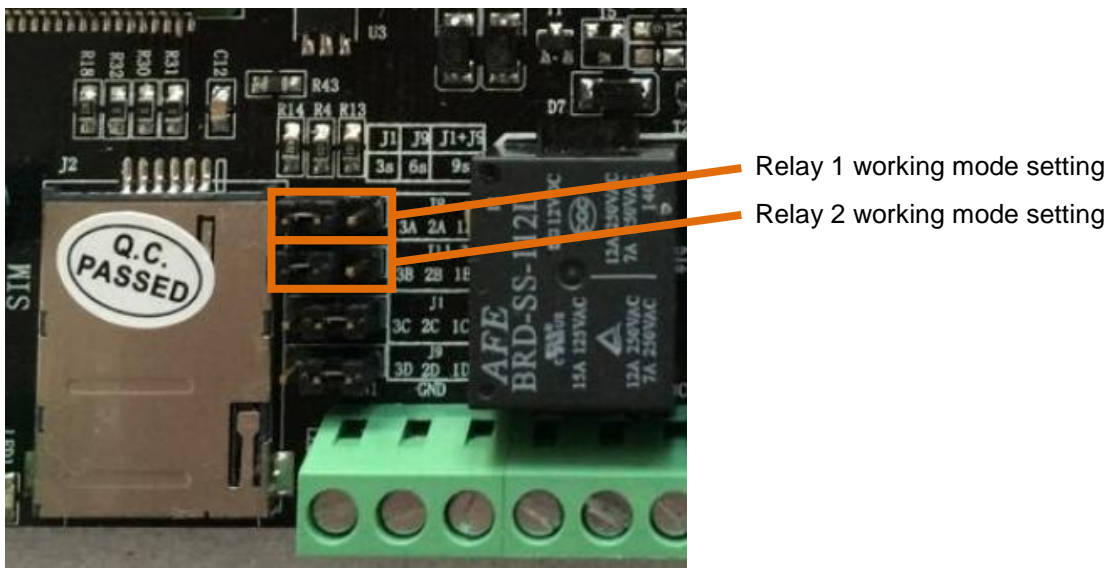


Figure 8: Relay working mode configurations

	Self-lock control – normal operation of relay on or off by command from user or device timer
	Latching control - which means relay go back to normal status after a period of (3, 6, 9 or 12) Seconds.

10.4. Delay time setting on latching mode

Working in latching mode, operators can configure G022P with different delay times for Relay 1 and Relay 2 by setting the delay time jumpers.

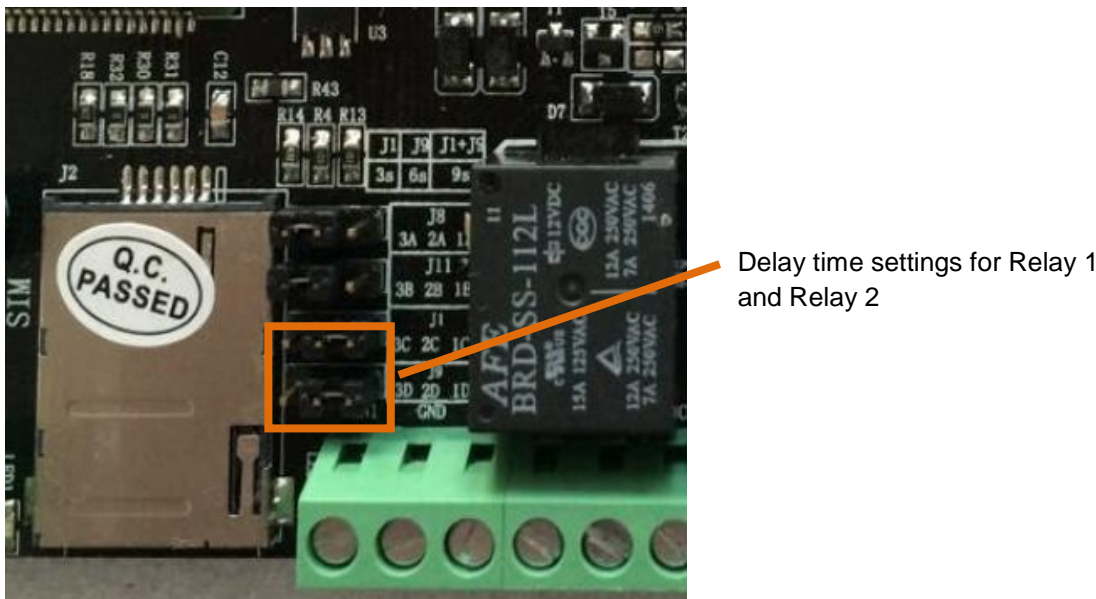


Figure 9: Delay time settings for relays

	Delay time set as:12 seconds
	Delay time set as:9 seconds
	Delay time set as:6 seconds
	Delay time set as: 3 seconds

Hardware versions, G022P provide SMS commands in '**ONOFFRnxxx#**' format to support other delay times (from 001 second to 999 seconds).

- 'n' indicates the relay number (1 or 2)
 - 'xxx' means the delay times (from 001 to 999 seconds)
- More details about this command can be found at chapter 10.

11. APP

The G022P APP provides a touch sensitive, user friendly interface.

The app will write the text messages for you and send them from your mobile for operators to control G021/22. The app also allows for up to two G022P devices to be controlled from a single mobile operator.

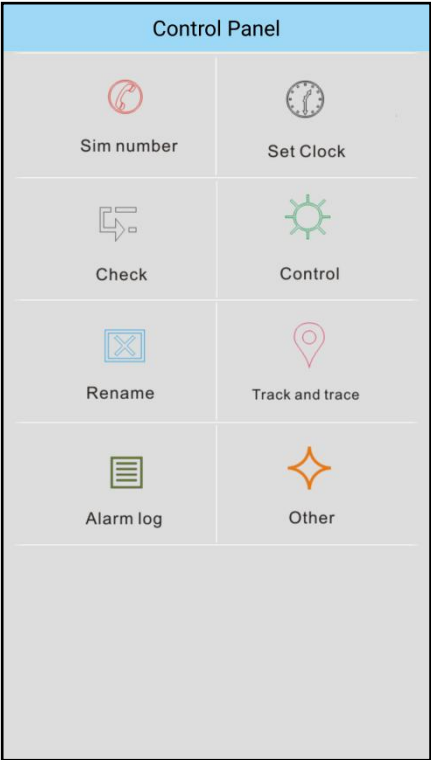


Figure 10: G022P APP: home page

iOS: The iOS G022P APP can be downloaded from Apple store.

Android: The latest Android G022P APP can be downloaded from the following link:

<https://www.quark-elec.com/product/g021-gsm-sms-remote-controller/>

The Android platform should be at least V 2.1 or higher.



Figure 11: APP logo on most android phones

11.1. Setup

After installation, on opening the APP for the first time, users will see the following page for the login process. This login page allows for users to input up to two devices and control them separately:


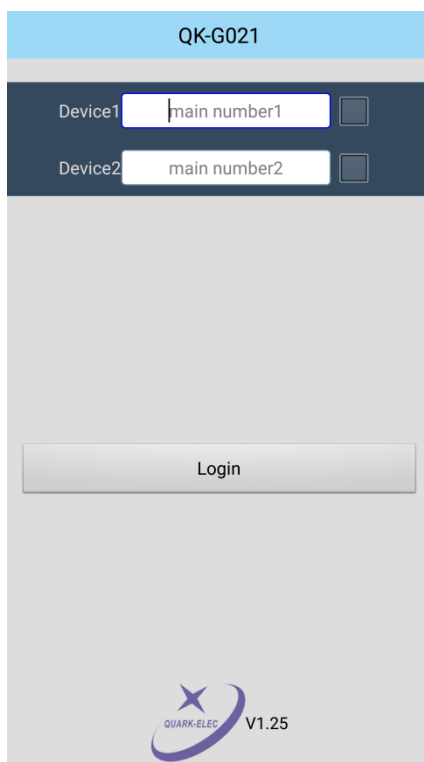


Figure12: Login page

11.2. Set QK controller SIM number

Input the number of the SIM card which is inserted in G021/22. All command SMS messages will be sent to this number via the APP.

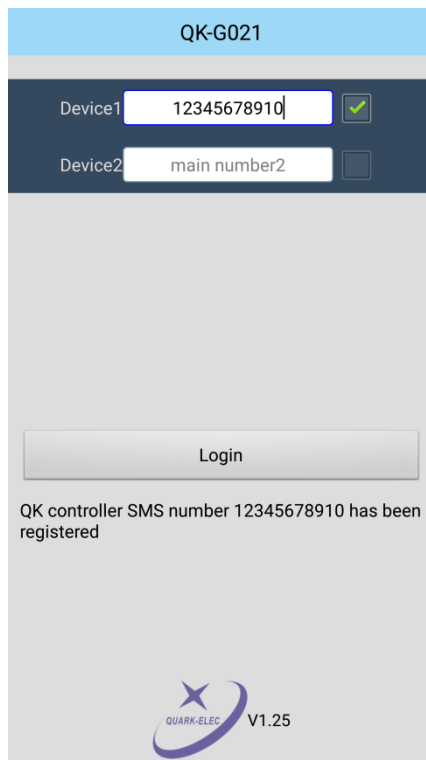

The screenshot shows the 'QK-G021' app interface. At the top, there's a light blue header with the text 'QK-G021'. Below this is a dark blue section containing two input fields: 'Device1' with the value '12345678910' and a green checkmark icon, and 'Device2' with the value 'main number2' and a grey square icon. Below these fields is a large grey rectangular area. At the bottom of this area is a 'Login' button. Below the button, a message states: 'QK controller SMS number 12345678910 has been registered'. At the very bottom, there is a logo for 'QUARK-ELEC' featuring a stylized star and the text 'V1.25'.

Figure 13: Login details successful

Once the SIM card number has been stored, the APP will reply with a successful message shown below the login button. Click the box next to the number you would like to operate the app with.

11.3. Register SIM cards

G022P allows one mobile phone to function as the main terminal and up to 3 additional phones to function as control terminals. The following interface allows the operator to register, delete and check the SIM card numbers:

Set operator SIM number

Main

Submit

Register myself as main SIM card

Register 1st additional SIM card

Delete

Register 2nd additional SIM card

Delete

Register 3rd additional SIM card

Delete

Check registered SIM numbers

Back

Figure 14: Register SIM card

Set operator SIM number

Main

Submit

Register myself as main SIM card

Register 1st additional SIM card

Delete

Register 2nd additional SIM card

Delete

Register 3rd additional SIM card

Delete

Check registered SIM numbers

QK controller SMS number 12345678910 has been registered

Back

Figure 15: Register successfully

11.4. Setting the clock on the QK controller

G022P can automatically execute actions at the time set by the operator. To do this, the real time clock on the QK controller should be set. This page allows the operator to check and set the time on G021/22. When using this function, the CR2032 battery should be used on the module. On V1.5 or later hardware versions, a solid capacitor is used instead of the CR2032 battery. With a solid capacitor, the real time clock can keep working for at least 12 minutes after power off.

Set clock on QK controller

Check the clock on QK controller

Request

Set clock on QK controller

Submit

Back

Figure 16: Check the clock on QK controller

Set clock on QK controller

Check the clock on QK controller

Request

Set clock on QK controller

11:55:00

Submit

Back

Figure 17: Setting clock

11.5. Check relay working mode

G022P has three individual relays which support two working modes, namely self-lock and latching control. When working in latching mode, the relay takes active action for a few seconds (depending on the time setting on the jumpers on the board.) and then reverts to normal status. When working in self locking mode, the unit will maintain active status until the next trigger input.

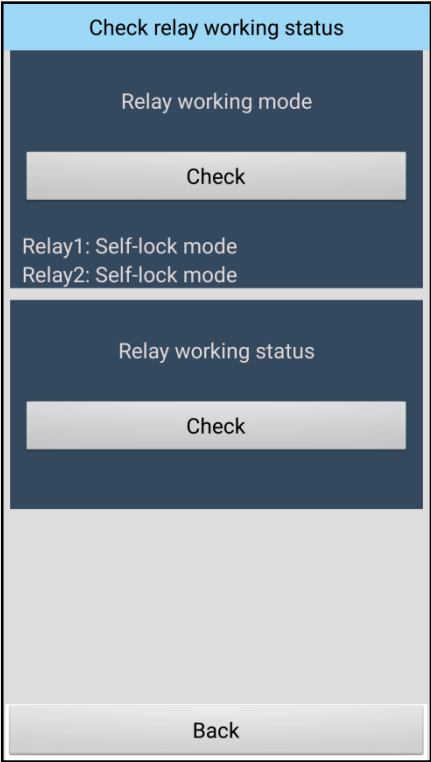


Figure 18: Check relay working mode

G022P can also report the relay working status via SMS to the operators.

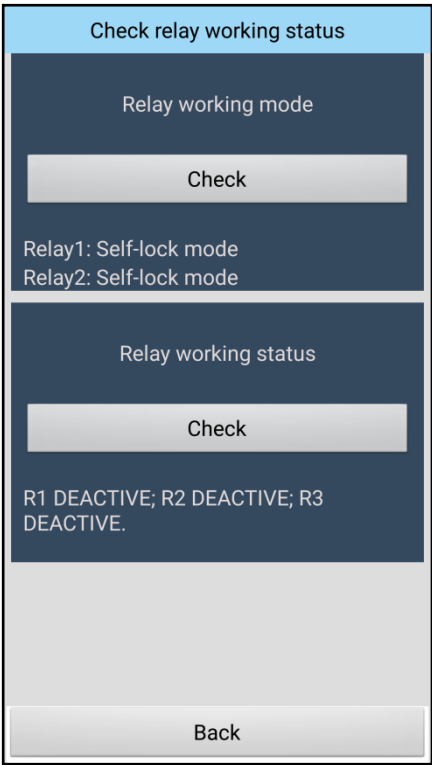


Figure 19: Check relay working status

11.6. Rename control terminals

The control terminals can be renamed as a meaningful name in APP.

Rename control terminals

Relay 1	<input type="text" value="Relay 1"/>
Relay 2	<input type="text" value="Relay 2"/>
Relay 3	<input type="text" value="Relay 3"/>
RF switch1	<input type="text" value="RF switch1"/>
RF switch2	<input type="text" value="RF switch2"/>
RF switch3	<input type="text" value="RF switch3"/>
RF switch4	<input type="text" value="RF switch4"/>

Back

Figure 20: Rename control terminals

11.7. Control panel

The control panel provides the main operating interface for turning relays on and off and setting timers.



Figure 21: Control panel interface for relay

12. Command and response SMS

Remember that all SMS text commands must always be sent using **CAPITAL** letters. Do not add spaces or any other characters.

Function	Command	Note
Register SIM cards		
Register main SIM card	88888888	Register the main mobile terminal with G021 module by sending ' 88888888 ' to G022P model. If registration is successful, the module will reply with ' Your phone has been registered. ' Each G022P module can only have one main registered SIM card number. This message should be received within the first 300 seconds once G022P powered up, otherwise ' registered disabled ' message will be send back to inform the failure of the main SIM registration.
Replace main SIM card	XGZHM	The registered main mobile terminal can send ' XGZHM ' command at any time if a new SIM card needs to be replaced as the main mobile. After G022P module receives ' XGZHM ', it will allow any mobile terminal to replace the main mobile number by sending ' 88888888 ' within 300 seconds.
Register additional SIM cards	BDn(mobile number)F n=1, 1 st additional mobile n=2, 2 nd additional mobile n=3, 3 rd additional mobile	Once the main mobile terminal is registered with G021/22, another three mobile terminals can be paired with G021/22. For example, by sending " BD107919157124F ", the first additional mobile terminal (number is 07919157124) has been paired with G021/22. Similarly, " BD207909135124F " means pairing G022P with the second additional terminal (whose number is 07909135124). The message ' Your number n phone has been registered ' will be returned by G021/22, if mobile terminal n is successfully paired.
Delete additional SIM cards	DELn n=1, 1 st mobile terminal n=2, 2 nd mobile terminal n=3, 3 rd mobile terminal	The registered SIM cards can be deleted from the authorized SIM list by sending DELn . The deleted SIM terminals can no longer control G021/22.
Check registered SIM numbers	WHORED	G022P will reply with the authorized SIM list in the following format: 'No.1 SIM is xxxxxxxx; No.2 SIM is xxxxxxxx; No.3 SIM is xxxxxxxx.'
Switching relay & mode checking		
Switching relay ON	DKYn n=1, Relay 1; n=2, Relay 2; n=3, Relay 3.	G022P will reply with the relay state information in the following format: 'Port n ON' ,---working in self-lock mode 'Port n has been triggered' ---working in latching mode Where n is the relay number.
Switching relay OFF	GBYn n=1, Relay 1; n=2, Relay 2 n=3, Relay 3.	G022P will reply with the relay state information in the following format: 'Port n OFF' , ---working in self-lock mode 'External triggered, no action' , ---working in latching mode

		Where n is the relay number.
Check relay working mode	RMODE	G022P will reply with the relay working mode information in the following format: 'MMMM1MMMM2' , where MMMM could be INCH or SELF. INCH refers to Latching control mode (relay will act for 3 seconds and then revert to the normal position), and SELF refers to Self-lock mode. For example, INCH1SELF2 means, relay 1 works in Latching control mode and relay 2 works in Self-lock mode.
Check relay working status	WHOACTIVE	G022P will reply with the relay working status information similar to the following format: 'R1, R2, R3: ACTIVE; DEACTIVE; ACTIVE.' Where ACTIVE means the related relay has been triggered (COM port connected to NO port), DEACTIVE means the related relay is on the normal status.
One-off relay switch toggling	ONOFFRnxxx# n=1, Relay 1; n=2, Relay 2. xx range from 001 to 999, indicating the delay time in seconds. *From Aug 2018, this command has changed to be 'ONOFFRnxxx#' ; this allows the maximum time can be 999 seconds.	For example, by receiving ONOFFR175# , the first relay (Relay 1) will be triggered on for 75 seconds and then switched off, whether G022P is working in Latching mode or in Self-lock mode. G022P will reply with the relay information in the following format: 'Port 1 is ON and will be OFF 75 seconds afterwards' . This is a one-off command, only valid for one time action. The APP does not support this command, so the operator should use SMS to send this message.
Timer		
Set time on 021/022	SThhmmss# Where hhmmss is the current time	For example, by sending 'ST153000#' , the operator set G022P time as 15:30:00. G022P will return the message 'Time setup successful' to accept this setting. If the operator sends the wrong time format, G022P will return the message 'Time setup failed'.
Check the local time on 021/022	DQSJ	By sending 'DQSJ' , the operator will receive the local time. The message received would be 'Time at terminal is 12:30:32' .
Set Switching Relays ON time	ONnhhhmmss n=1, Relay 1 n=2, Relay 2 hhmmss is the Switch ON time.	For example, by sending 'ON2163000' , the operator set Switch Relay 2 ON at 16:30:00. Message as 'Port 2 will switch ON' will be returned to operator if the setting successful.
Set Switching Relays OFF time	OFnhhhmmss n=1, Relay 1 n=2, Relay 2 hhmmss is the Switch OFF time.	For example, by sending 'OF2194500' , the operator set Switch Relay 2 OFF at 19:45:00. Message as 'Port 2 will switch OFF' will be reply to operator if the setting successful.
Check the current setting of the timer	RELAYnTIMER n=1, Relay 1 n=2, Relay 2	For example, by sending "RELAY2TIMER" , the timer setting on reply 2 will be reply to operator. The replied message will be similar as 'Port 2 will switch ON at 12:30:00 and switch OFF at 13:30:00'
Switch off the Timer setting	GDSn n=1, Relay 1 n=2, Relay 2	Message 'Timer on Relay n has switched OFF' will be returned to the operator if the setting is successful; where n is '1' or '2'.

		Note: The local time will not be affected by switching off the timer.
Monitoring/alarm input		
Releases relay status which is triggered by the external signals.	EXTRT	After it has been triggered by the external signals, the related relay will be locked in the normal state. By sending ' EXTRT ', the relays will be unlocked and available for responding to SMS commands again.
Disable the function of been triggered by external signals.	EXTGBn n=1, Relay 1 n=2, Relay 2 n=3, only available for PIRwireless PIR detector (G022P variant)	By sending ' EXTGBn ', the external alarm input n will be disabled. Message 'Alarm input n has been disabled.' will be returned to the operator if the setting is successful, where n is '1' '2' or '3'. By sending ' EXTRT ' all external alarm inputs will be active. This disable status isn't achievable by re-powering up the module, only ' EXTRT ' will re-enable the external alarm input.
G022P has two digital input ports which can be used to monitor external signals. These two external input ports can accept 0 V to 24 V voltage levels. Should the input voltage level be below 1.0 V, the main mobile terminal will receive the warning message 'Port n has been triggered', where n is the relay number. The relay n will switch to the normal state (NC will be the closed state and NO will be the open state). Sending ' EXTRT ' will release the relays and make them available for responding to SMS commands.		

13. Specification

Item	Specification
Frequency bands	Quad-band: GSM850, EGSM 900, DCS1800, PCS1900.
SMS	MT, MO, CB, test and PDU mode
Operating temperature	- 25°C to + 80°C
Storage temperature	- 40°C to +85°C
DC supply	12.0 to 24.0V (+/-5%)
Average supply current (typical quiescent)	40 mA
Maximum supply current (during SMS transceiver activity)	600 mA
GSM receive sensitivity	-107 dBm
GSM transmitting power	Class 4 (2 W) at GSM850, EGSM 900. Class 1 (1 W) at DCS1800, PCS1900.
433 MHz transmitting power	1 W
433 MHz modulation mode	ASK (AM)
RF transmission power	<10 mW
RF emission distance	25 to 50 meters (open air conditions)
Rated current on relay	7A 240 V AC
GPS sensitivity	-162dBm
GPS positional accuracy	+/-53.8 meters
Rated voltage on relay	9 V - 245 V
RF main socket power rating	< 2000 W

For more technical information and enquiries please go to the Quark-elec forum:
<https://quark-elec.com/forum/>

For sales and purchasing information, please email us at: info@quark-elec.com

14. Specialized units

14.1. Wireless PIR detector (G022P variant)

G022P series controller has a 433 MHz RF receiver module. It can pair with one wireless PIR (passive Infrared sensor motion detector, also called a PIR sensor). Please note that G022P cannot pair with any RF mains sockets.

G022P RF receiver module works at 433.92 MHz and can talk to the paired wireless PIR sensor within 25 meters range in open areas. Once G022P receives an alarm signal from the paired PIR detector, Relay 3 will be activated and locked until 'EXTRT' has been sent to unlock Relay 3. The main mobile terminal will receive the warning message 'Port 3 has been triggered' at the same time.

The switch sockets are paired and ready to use if they are ordered together with G021/22. However the operator can always pair or release the pairing by the following steps:

- Switch off the PIR detector.
- Power up G022P module, wait at least 60 seconds.
- Using a small flat head screwdriver, press and hold the button on the receiver module. The LED light on the receiver module will turn off. Release the button until the LED light turns on. Once the LED light turns on, the memory on the module has been erased and is ready for pairing.

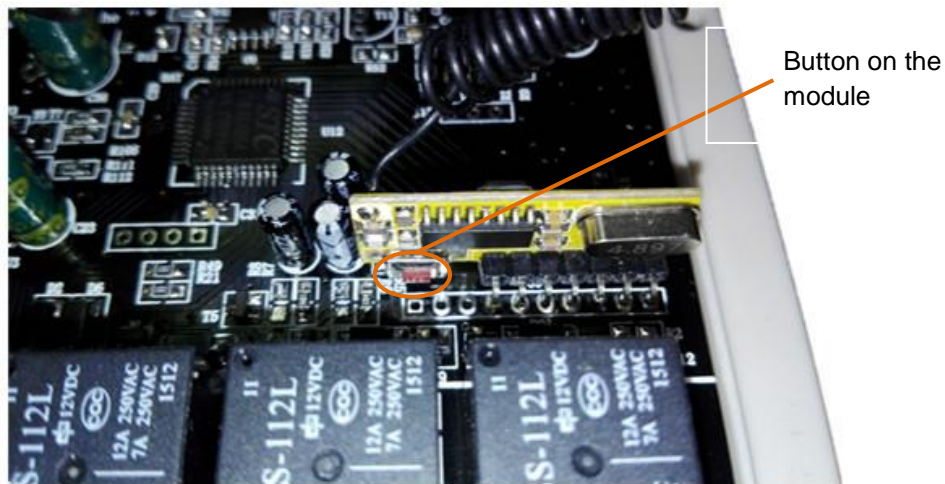


Figure 24: G022P module

- Press the button on the module quickly again. The LED light will turn off again. Now the module is in 'ready-to-pair' mode and will only stay in this status for 10 seconds. During these 10 seconds, switch on the PIR detector with the sensor side facing the operator's body. This allows PIR detector to send a detecting signal. The LED will flash six times when the PIR is paired with the G022P module. If the pairing process could not be completed during 10 second, the operator can press the button again to repeat this step.
- G022P will now be successfully paired with the wireless PIR detector.

Quark-elec Manual

To confirm this, restart G022P and hold the wireless PIR detector in the hand (facing the sensor side to the operator's body). After about 10 seconds, a click sound from G022P will be heard. This comes from the Relay3 action triggered by the PIR detector.

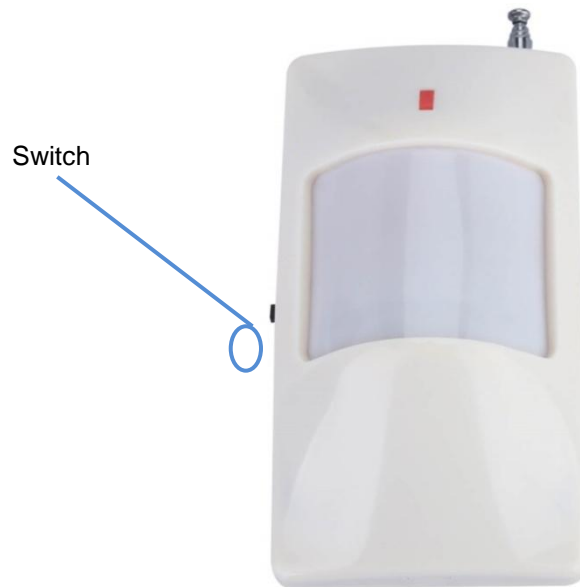


Figure 25: Wireless PIR detector

15. Order options

Product code	Description
G021	GSM remote control module
G022	G021 with enclosure
G022P	G022 with PIR sensor receiver and one wireless 433 MHz PIR sensor
G022G	G022 with GPS receiver

16. Limited warranty and notices

Quark-elec warrants this product to be free from defects in materials and manufacture for one year from the date of purchase. Quark-elec will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts and labour. The customer is, however, responsible for any transportation costs incurred in returning the unit to Quark-Elec. This warranty does not cover failures due to abuse, misuse, accident or unauthorized alteration or repairs. A returns number must be given before any unit is sent back for repair.

The above does not affect the statutory rights of the consumer.

Disclaimer

It is the user's responsibility to use this product prudently. Neither Quark-, nor their distributors or dealers accept responsibility or liability either to the products user or their estate for any accident, loss, injury or damage whatsoever arising out of the use or of liability to use this product.

Accuracy of this manual

Quark- products may be upgraded from time to time and future versions may therefore not correspond exactly with this manual. The manufacturer of this product disclaims any liability for consequences arising from omissions or inaccuracies in this manual and any other documentation provided with this product.

Document history

Issue	Date	Changes / Comments
1.0	04-10-2013	Initial release
1.39	03-07-2014	Fix a bug: Use 'BD1 (mobile number) F' as the registration of additional mobiles command. Still use '5+n(mobile number)F' for 1.0 and 1.1 hardware version.
1.40	30-07-2014	Release G022R433US (US type power sockets)
1.44	12-12-2014	Use 'WHOACTIVE' to replace 'RSTATUS' message to check the relay status.
1.45	03-04-2015	Support 'ONOFFRnxx#' SMS command.
1.47	09-12-2015	Release G022P433 (supports wireless PIR motion detector).
1.48	14-02-2016	Minor changes and corrections
1.49	23-03-2016	Release G022G (supports GPS positioning function).
1.50	17-04-2016	Add 'EXTGBn' command to support disabling the external alarm input function.
V2	29/10/2018	New 2018 format

For more technical information and enquiries please go to the Quark-elec forum:
<https://quark-elec.com/forum/>

For sales and purchasing information, please email us at: info@quark-elec.com

Quark-elec (UK)
Unit 7 the Quadrant
Newark close
Royston, UK
SG8 5HL

